

LS1350 LS1351



Scan the QR code for support information



vtech® Quick Start Guide

Important safety instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
5. Do not expose the telephone to direct sunlight or extreme cold environment. Do not put the telephone close to heating sources, such as radiators, cookers, heaters, etc.
6. Do not overload mains wall outlets and extension cords as this can result in the risk of fire or electric shock.
7. Unplug this product from the wall outlet and contact the retailer or our customer service representative under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If the product does not operate normally by following the operating instructions.
 - If the product has been dropped and the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.
8. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
9. Do not use the telephone to report a gas leak in the vicinity of the leak.
10. Use only the supplied NiMH (Nickel Metal Hydride) batteries. The handset talk and standby operating times stated only apply when using original fitment batteries. Batteries from other manufacturers or capacities may not achieve the times stated.
11. The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. The manufacturer will not be held liable for damage or injury arising from using incorrect battery types.
12. Do not use third party charging cradles. The batteries may be damaged.
13. Please note the correct polarity while inserting the batteries.
14. Batteries must not be exposed to direct sunlight, fire or immersed in water.
15. The batteries cannot be subjected to high or low extreme temperature and low air pressure at high altitude during use, storage or transportation as this may result in an explosion or the leakage of flammable liquid or gas. Disposal of batteries into fire or a hot oven, or mechanically crushing or cutting them can also result in an explosion.
16. Use only adaptors and countries with recycling systems external power supply: VTech Telecommunications Limited. Model: VT05EEU06045 | VT05EUK06045; Jiangxi Jian Aohai Technology Co., Ltd. Model: A318-060045W-EU1 (EU plug) | A318-060045W-UK1 (UK plug). Use only the supplied batteries: Yi Yang Corun Battery Co., Ltd. Model: Ni-MH AAA 400mAh 1.2V; GPI. Model: VT40AAAHC 1.2V 400mAh; Highpower. Model: HFR-AAA400 1.2V 400mAh.

Disposal of Old Equipment and Batteries (WEEE)

Only for European Union and countries with recycling systems
These symbols (a, b) on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries must not be mixed with general household waste. For proper treatment, recovery and recycling of old products and batteries, please take them to applicable collection points in accordance with your national legislation.



By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment. For more information about collection and recycling, please contact your local authority. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

Product disposal instructions for business users

If you wish to discard electrical and electronic equipment, please contact your local authorities or dealer for further information.

Information on Disposal in other countries outside the European Union

These symbols (a, b) are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Note for the battery symbol

This symbol (b) might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

Recycle your device (WEEE directive 2012/19/EU)

The WEEE logo appears on the product to indicate that this product must not be disposed off or discarded with other household waste. You are responsible for the correct disposal of your electronic and electrical waste equipment in accordance with your local authority regulations on the recycling of hazardous waste.

Approval and conformity

This product is intended for use within Europe and the UK. This equipment complies with the essential requirements of the EU Radio Equipment Directive (2014/53/EU) and the UK Radio Regulations 2017 on radio systems and telecommunication equipment. VTech Telecommunication Ltd. hereby declares that this telephone PS1350/PS1351/PS1352 complies with the essential requirements and other relevant provisions of EU Radio Equipment Directive (2014/53/EU) and the UK Radio Equipment Regulations 2017.

The declaration of conformity may be viewed at www.vtechphones.eu.

The symbol confirms the conformity of the telephone and the above directive.



Importer: VTech Electronics Europe Plc.

Napier Court, Abingdon Science Park, Abingdon, Oxfordshire, OX14 3YT.

Manufacturer: VTech Telecommunications Ltd.

23/F, Tai Ping Industrial Centre, Block 1, 57 Ting Kok Road, Tai Po, Hong Kong.

Operating condition	Power consumption
Off mode	<1 W
Network standby mode	<1 W

Customer Service and Product Warranty

IMPORTANT

Please retain this guide with your sales receipt as proof of the date of purchase.

Customer Service

Please email to service-ukphone@vtechphones.eu and a service representative will be happy to help you.



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase.
3. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
4. This warranty is personal to the original purchaser and is not transferable.
5. Breakages to the LCD screen are not covered by the warranty.

VTech Electronics Europe Plc, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Ireland only. For products purchased outside the UK and Ireland, please contact your local distributor or place of purchase.



 
Specifications are subject to change without notice.
© 2016 VTech Telecommunications Ltd.
@ 2016 VTech Telecommunications Ltd. All rights reserved. 04/26, LS1350, LS1351, UK, GSO, V4




Frequency control	Crystal controlled PLL synthesizer
Transmit frequency <td>1.88 GHz to 1.9GHz</td>	1.88 GHz to 1.9GHz
Channels <td>10</td>	10
Nominal range <td>Actual operating range may vary according to environment conditions at the time of use.</td>	Actual operating range may vary according to environment conditions at the time of use.
Handset Battery:	1) Yi Yang Corun Battery Co., Ltd.: Ni-MH AAA 400mAh 1.2V 2) GPI: VT40AAAHC 1.2V 400mAh 3) Highpower: HFR-AAA400 1.2V 400mAh
Base/Charger	VTPL: VT05EEU06045 Jiangxi Jian Aohai Technology Co., Ltd.: A318-060045W-EU1 Input 100-240V AC 50/60Hz 0.15A, Output 6VDC 0.45A 2.7W (EU plug).
Power requirement	VTPL: VT05EUK06045 Jiangxi Jian Aohai Technology Co., Ltd.: A318-060045W-UK1 Input 100-240V AC 50/60Hz 0.15A, Output 6VDC 0.45A 2.7W (UK plug).
RF power	>250mW

Technical Specifications


Connect the base/charger

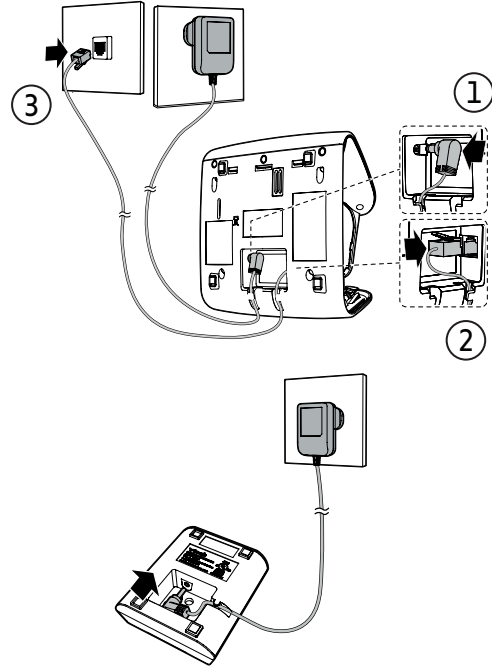

Install the battery

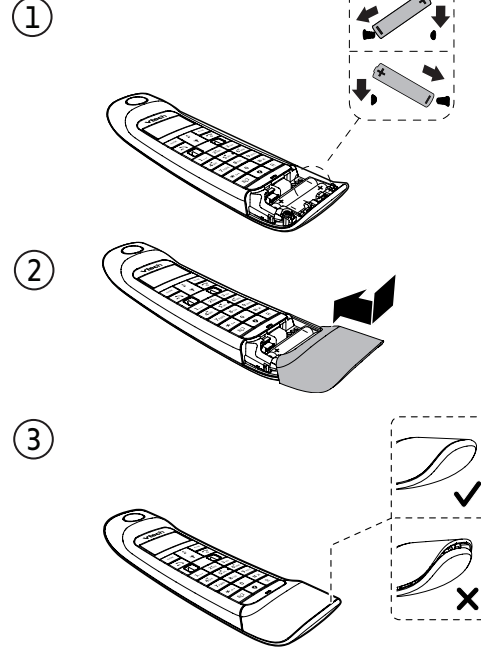 

Charge the battery

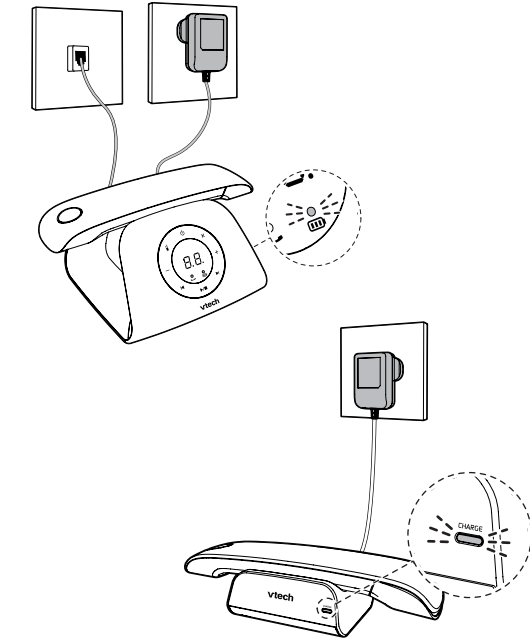 

Settings

SET LANGUAGE

⇨/OK → ▲/▼ → HS SETTINGS → ⇨/OK
→ ▲/▼ → LANGUAGE → ⇨/OK
→ ▲/▼ → ENGLISH | DEUTSCH | FRANÇAIS |
ITALIANO | ESPAÑOL | NEDERLANDS → ⇨/OK

SET DATE OR TIME FORMAT

⇨/OK → ▲/▼ → HS SETTINGS → ⇨/OK
→ ▲/▼ → DATE & TIME → ⇨/OK
→ ▲/▼ → DATE FORMAT → ⇨/OK
→ ▲/▼ → DD-MM-YY / MM-DD-YY → ⇨/OK
→ ▲/▼ → TIME FORMAT → ⇨/OK
→ ▲/▼ → 12 HR / 24 HR → ⇨/OK

SET DATE & TIME

⇨/OK → ▲/▼ → HS SETTINGS → ⇨/OK
→ ▲/▼ → DATE & TIME → ⇨/OK
→ ▲/▼ → SET DATE → ⇨/OK
→ Enter the date → ⇨/OK
→ ▲/▼ → SET TIME → ⇨/OK
→ Enter the time → ⇨/OK

RINGER - EXTERNAL CALLS

⇨/OK → ▲/▼ → HS SETTINGS → ⇨/OK
→ ▲/▼ → RING SETUP → ⇨/OK
→ ▲/▼ → EXT, RING → ⇨/OK
→ ▲/▼ to select melody → ⇨/OK

RINGER - INTERNAL CALLS

⇨/OK → ▲/▼ → HS SETTINGS → ⇨/OK
→ ▲/▼ → RING SETUP → ⇨/OK
→ ▲/▼ → INT, RING → ⇨/OK
→ ▲/▼ to select melody → ⇨/OK

RINGER - VOLUME

⇨/OK → ▲/▼ → HS SETTINGS → ⇨/OK
→ ▲/▼ → RING SETUP → ⇨/OK
→ ▲/▼ → RING VOLUME → ⇨/OK
→ ▲/▼ to select volume → ⇨/OK

TONE - SET KEY TONE ON/OFF

⇨/OK → ▲/▼ → HS SETTINGS → ⇨/OK
→ ▲/▼ → TONE SETUP → ⇨/OK
→ ▲/▼ → KEY TONE → ⇨/OK
→ ▲/▼ to choose ON or OFF → ⇨/OK

TONE - SET ALERT TONES ON/OFF

⇨/OK → ▲/▼ → HS SETTINGS → ⇨/OK
→ ▲/▼ → TONE SETUP → ⇨/OK
→ ▲/▼ → BATTERY TONE/OUT OF RANGE →
⇨/OK → ▲/▼ to choose ON or OFF → ⇨/OK

ALARM - SET ALARM TIME AND ACTIVATION

⇨/OK → ▲/▼ → HS SETTINGS → ⇨/OK
→ ▲/▼ → ALARM → ⇨/OK
→ ▲/▼ → ON → ⇨/OK
→ Enter alarm time in 24 hr format → ⇨/OK
→ Display SNOOZE → ⇨/OK
→ ▲/▼ to select ON or OFF → ⇨/OK

SET THE AUTO ANSWER

⇨/OK → ▲/▼ → HS SETTINGS → ⇨/OK
→ ▲/▼ → AUTO ANSWER → ⇨/OK
→ ▲/▼ to select ON or OFF → ⇨/OK

Phonebook

STORE A NUMBER ENTRY

⇨/OK → ▲/▼ → PHONEBOOK → ⇨/OK
→ ALL CONTACTS → ⇨/OK twice → ADD
→ ⇨/OK → NAME → ⇨/OK and enter name →
⇨/OK → NUMBER → ⇨/OK and enter phone
number → ⇨/OK → MELODY 1 → ▲/▼ to select
melody → ⇨/OK

Quick access keys



Redial list



Phonebook



Nuisance and Unwanted Call Blocker

ADD A CALL BLOCK ENTRY

⇨/OK → ▲/▼ → CALL BLOCKER → ⇨/OK
→ BLACK LIST → ⇨/OK twice → ADD
→ ⇨/OK → NAME → ⇨/OK and enter name
→ ⇨/OK → NUMBER → ⇨/OK and enter phone
number → ⇨/OK

BLOCK UNKNOWN CALLS

⇨/OK → ▲/▼ → CALL BLOCKER → ⇨/OK
→ ▲/▼ → SETTINGS → ⇨/OK
→ ▲/▼ → CALL TYPE → ⇨/OK
→ ▲/▼ → UNAVAILABLE → ⇨/OK
→ ON or OFF → ⇨/OK

Answering machine

TURN ON OR OFF WITH HANDSET

⇨/OK → ▲/▼ → ANS. MACHINE → ⇨/OK
→ ▲/▼ → TAM ON/OFF → ⇨/OK
→ ▲/▼ → ON or OFF → ⇨/OK

TURN ON OR OFF WITH BASE

Press  to turn on; press again to turn off.

PLAY/STOP, DELETE, REPEAT AND SKIP MESSAGE


 


When there is a message on the answering machine, press these keys on the base to:-

PLAY/STOP	DELETE	REPEAT	SKIP
			

To activate the handset controls during message playback, press:-

⇨/OK → ▲/▼ → ANS. MACHINE → ⇨/OK
MSG PLAYBACK → ⇨/OK


Press these handset keys to control messages.

STOP	DELETE	REPEAT	SKIP
 5 JKL	 2 ABC	 4 GHI	 6 MNO

Other controls/indicators on the base

Adjust base volume
- | +

Find handset


Line in use


Message number
88