



# vtech

on purchasing your new VTech product. Before using this product, please read Important safety

This manual has all the feature operations and troubleshooting necessary to install and operate your new VTech product. Please review this manual thoroughly to ensure proper installation and operation of this innovative and feature-rich VTech product.





All rights reserved. 02/21. VM2251\_UK\_CIB\_V6

pecifications are subject to change without notice.







# VM2251

When using your equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

IMPORTANT SAFETY INSTRUCTIONS

- 1. Follow all warnings and instructions marked on the
- Adult setup is required.
- 3. CAUTION: Do not install the baby unit at a height above
- This product is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be used as such.
- This product is not intended for use as a medical
- monitor.
  Do not use this product near water. For example, do not use it next to a bath tub, wash bowl, kitchen sink, laundry tub or swimming pool, or in a wet basement or shower.
  CAUTION: Use only the battery provided. There may be a risk of explosion if a wrong type of battery is used for the parent unit. The battery cannot be subjected to high or low extreme temperature and low air pressure at high alfitude during use, storage or transportation. Disposal of battery into fire or a hot oven, or mechanically crushing or cutting or the battery can result in an explosion. Leaving the battery in an extremely high temperature surrounding environment can result in an high temperature surrounding environment can result in an explosion or the leakage of flammable liquid of gas. Battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas. Dispose of used battery according to the instructions.
- Use only the adapters included with this product. Incorrect adapter polarity or voltage can seriously damage the product.

Output: 6V DC 400mA
Ten Pao Industrial Co, Ltd.
Model: S003ATV0600040(EU),S003ATB0600040(UK);

Rechargeable battery information: Ni-MH AAA800mAh 3.6V

- Model: Corun Ni-MH AAA800mAh 3.6V The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily
- Unplug this product from the wall outlet before cleaning.
   Do not use liquid or aerosol cleaners. Use a damp cloth to
- Do not cut off the power adapters to replace them with other plugs, as this causes a hazardous situation. Do not allow anything to rest on the power cords. Do not install this product where the cords may be walked on or
- 14. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company.

  15. Do not overload wall outlets or use an extension cord.
- Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
- 17. This product should not be placed in any area where Inis product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat
- 18. Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.

# The applied nameplate is located at the bottom of the baby unit's base. 19. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the product other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.

- 20. You should test the sound reception every time you turn on the units or move one of the components.

  21. Periodically examine all components for damage.
- There is a very low risk of privacy loss when using certain electronic devices, such as baby monitors, cordless telephones, etc. To protect your privacy, make sure the product has never been used before purchase reset the baby monitor periodically by powering off and then powering on the units, and power off the baby monitor if you will not use it for some time. Children should be supervised to ensure that they do not play with the product.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

### SAVE THESE INSTRUCTIONS

- Use and store the product at a temperature between  $0\,^{\circ}\text{C}$  and  $40\,^{\circ}\text{C}$  .
- Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating
- Warning—Strangulation Hazard—
  Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3 ft (0.9 m) away). Do not remove this tag.
- Never place the baby unit(s) inside the baby's cot or playpen. Never cover the baby unit(s) or parent unit with anything such as a towel or a blanket.
- Other electronic products may cause interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible: wireless routers, radios, cellular telephones, intercoms, room monitors, televisions,

Cardiac pacemakers (applies only to digital cordless devices): Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians

- Should keep wireless devices at least six inches from the pacemaker.
- Should NOT place wireless devices directly over the pacemaker, such as in a breast pocket, when it is turned ON.


Electromagnetic fields (EMF)

# CONNECT AND CHARGE THE BATTERY

### NOTES

- · The rechargeable battery is pre-installed in your parent unit.
- Use only the power adaptors supplied with this product.
- Make sure the baby monitor is not connected to the switch controlled electric outlet.
- · Connect the power adaptors in a vertical or floor mount position only. The adaptors' prongs are not designed to hold the weight of baby monitor, so do not connect them to any ceiling, under-the-table, or cabinet outlets. Otherwise, the adaptors may not properly connect to the outlets
- Make sure the parent unit, the baby unit and the power adaptor cords are out of reach of children

### Connect the baby monitor

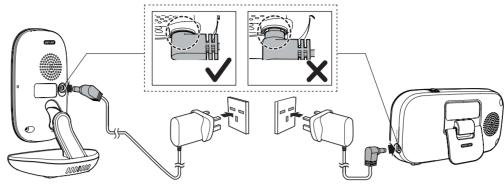

### Charge the parent unit battery

When you have connected and turned on the parent unit, the battery will be charged automatically. The battery icon indicates the battery status (see the following table).

- $\cdot$  Before using the baby monitor for the first time, charge the parent unit battery for 12 hours. When the parent unit battery is fully charged, the battery icon becomes solid ....
- · It takes longer to charge the battery when the parent unit is turned on. To shorten the charging time, turn the parent unit off while charging.
- The standby time varies depending on the volume level you set and your actual use.

	Battery indicators	BATTERY STATUS	Астіон
	The screen displays <b>Battery low at Parent Unit</b> . The <b>or</b> ight flashes.	The battery has very little charge and may be used for only a short time.	Charge without interruption (about 30 minutes).
	The battery icon becomes solid	The battery is fully charged.	To keep the battery charged, connect it to AC power when not in use.

# 2 Before use

This baby monitor should be used as an aid and proper adult supervision is required.

### Test your baby monitor

You may test the baby monitor before initial use, and at regular times thereafter.

- For hearing protection, make sure the parent unit is more than 1 metre away from both baby units. If you hear any high-pitched noise, move the parent unit further until the noise stops. You
- 1. Make sure your baby unit and parent unit are on. 2. The parent unit displays images from the baby unit.
- Speak towards the microphone of the baby unit. You will hear the sound at the parent unit.
- 3. If you have two baby units, view the image from one of them by switching cameras via menu. Then, repeat step 2.

· When the parent unit displays 🥻 No link to Camera, and the POWER LED light flashes, move the paren unit closer to the baby units (observe the minimum distance of 1 metre). You can also check if the baby unit is connected to a live power socket and switched on.

### Positioning the baby monitor

Keep the baby unit out of the reach of your baby. Never place or mount the baby unit inside the baby's cot or playpen.

To avoid interference from other electronic devices, place your baby monitor far away from devices such as wireless routers, microwaves, cell phones and computers

- 1. Place the baby units more than 1 metre away from 2. Adjust the angle of the baby unit camera to aim at
- your baby.
- the baby units.

### (1) CAUTION

- The default volume of your parent unit is level 3, and the maximum volume is level 5. If you experience high-pitched
- screeching noise from your baby monitor while positioning: Make sure your baby units and parent unit are more than
- Turn down the volume of your parent unit.

### Operating range

The operating range of the baby monitor is up to 1000 feet (300 metres) outdoors or 160 feet

Parent unit power adaptor: Output: 6V DC @ 400mA

Actual operating range may vary according to environmental conditions at the time of use.

Maximum power used by the transmitter: 0.10W (100mW)

Baby unit power adaptor: Output: 6V DC ⊚ 400mA

Parent unit: 3.6V Ni-MH battery

2.4" Color LCD (QVGA 320x240 pixel)

Parent unit: 2405 - 2475 MHz

Crystal controlled PLL synthesizer

zHM 2742 - 2042 :tinu ydeg

### Power on or off the baby unit

- Slide the ON/OFF switch to ON to turn on the baby unit.
- Slide the **ON/OFF** switch to **OFF** to turn off the baby unit. The **POWER** LED light turns off.

### Power on or off the parent unit

- Slide the **ON/OFF** switch to **ON** to turn on the parent unit.
- Slide the **ON/OFF** switch to **OFF** to turn off the parent unit. The screen and the **POWER** LED light turns off.

### Adjust parent unit speaker volume

Press VOL▲/VOL▼ on the parent unit to adjust the speaker volume.

You can change the brightness of the parent unit screen from Level 1 to Level 5. The LCD brightness is preset to Level 3.

- 1. Press  $\frac{MENU}{SFLECT}$  when the parent unit is idle.
- 2. Press ◀ or ▶ to choose ❖, then press ▲.
- 3. Press ▼ or ▲ to choose the desired level of brightness, then press MENU to confirm your selection.

### Turn off parent unit screen

- Press 📭 to turn off the screen. You can still hear sound from the baby unit.
- Press again to turn on the screen.

You can set the screen off time for the parent unit when there is no key press for a specific time

- 1. Press MENU when the parent unit is idle.
- 2. Press ◀or ▶ to choose ②, then press MENU or ▲ to open the submenu.
- 3. Press ▼ or ▲ to choose the desired time period to automatically turn off screen (III / III - 5 min./ III - 30 min. / III - 60 min.), then press MENU to confirm your selection.

The baby monitor has two lullabies and two soothing sounds for you to comfort your baby. You can play the lullabies or soothing sounds on the baby unit using the parent unit.

- 1. Press  $\frac{MENU}{SELECT}$  when the parent unit is idle.
- 3. Press ▲ to choose 🍇, then press MENU or ◀.
- 5. Press MENU selection.
- The selected Iuliaby plays for 30 minutes and stops automatically.
  The Iuliaby playback on the baby unit will be paused when receiving talkback from the parent unit.

You can choose to hear sounds from the baby unit all the time, or to hear sounds that exceed a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby unit. The higher the sensitivity level, the more sensitive the baby unit is in detecting sounds for transmitting to the parent unit. The VOX sensitivity level is preset to the highest level (I evel 5)

rransmining to the parent unit. The VOX sensitivity level is present in the highest level (Level 3).									
VOX SENSITIVITY LEVEL	Will Level 5	UK Level 4	UN Level 3	E WH Level 2	■ WW Level1				
SENSITIVITY	Highest VOX sensitivity level	High VOX sensitivity level	Medium VOX sensitivity level	Low VOX sensitivity level	Lowest VOX sensitivity level				
DESCRIPTION	The parent unit speaker is constantly on, and you will hear all sounds (including background noises) from your baby's room.	The parent unit speaker turns on for soft babbling and louder sounds from your baby. It remains quiet when your baby sleeps soundly.	The parent unit speaker turns on for loud babbling and louder sounds from your baby. It remains quiet when your baby makes soft sounds.	The parent unit speaker turns on for crying and louder sounds from your baby. It remains quiet when your baby makes soft sounds.	The parent unit speaker turns on for loud crying or screeching sounds from your baby. It remains quiet when your baby makes soft sounds.				

- 1. Press  $\frac{MENU}{SELECT}$  when the parent unit is idle.
- 2. Press ◀ or ▶ to choose ₩h, then press MENU or ▲ to open the submenu.

• If the screen is off, and the setting of sound-activated screen is **ON**, then LCD screen will be turned on automatically when VOX sensitivity is triggered.

· If you want to use a sound machine or white noise machine for natural white noise while using this baby monitor to check on your baby, you can:

- Lower the sensitivity level of your baby monitor to medium (level 3) or below. Default level is the highest level.

### Turn on or off the sound activation

When sound activation is on, as long as no sound is detected within 50 seconds, the parent unit screen will turn off automatically to save power.

When your baby unit detects a sound, which exceeds the selected sensitivity level, the sound activation triggers the parent unit screen to turn on automatically. When no sound is detected

- 1. Press MENU when the parent unit is idle.
- 2. Press ◀or ▶ to choose ఄ, then press MENU or ▲ to open the submenu.

- Lower the volume of your sound machine or white noise machine; or

· If the sound sensitivity is set to the highest level, the parent unit screen may remain on continuously even though sound activation is on. This depends on whether the baby unit detects any sounds.

You can zoom in while viewing images from the baby unit.

1. Press  $\frac{MENU}{SELECT}$  when the parent unit is idle.

### 2. Press ◀ or ▶ to choose <sup>⊕</sup> then press <sup>MENU</sup>/<sub>SELECT</sub> or ▲ to open the submenu. 3. Press $\nabla$ or $\triangle$ to choose $\mathbf{lx}$ or $\mathbf{lx}$ , then press $\frac{\text{MENU}}{\text{SELECT}}$ to confirm your selection.

You can use the TALK function of the parent unit to comfort your baby.

### 1. Speak towards the microphone on the parent unit. Your voice is broadcast to the baby unit.

2. Release the TALK key to stop the broadcast.

sensor. If the detected temperature is out of the preset temperature range, the parent unit will display an alert message.

- 1. Press MENU when the parent unit is idle
- 2. Press ◀or ▶ to choose 🕏 , then press 🛦
- 3. Press ▼ or ▲ to choose 📭, then press MENU select.
- 5. Press ▼ or ▲ to choose the desired minimum or maximum temperature, then press SELECT to confirm your selection.


You can turn on the temperature alert tone so that the parent unit will emit an alert tone if the detected temperature is out of range.

- 1. Press  $\frac{MENU}{SELECT}$  when the parent unit is idle.
- 2. Press ◀ or ▶ to choose ♣ then press ▲.
- 4. Press ▼ or ▲ to choose ■N or ■H, then press MENU selection.


### **Temperature format**


- 1. Press  $\frac{MENU}{SELECT}$  when the parent unit is idle.
- 2. Press ◀ or ▶ to choose ♦ then press ▲.
- 3. Press ▼ or ▲ to choose ♣ then press MENU.
- 4. Press ▼ or ▲ to choose **F** or **C**, then press MENU selection.



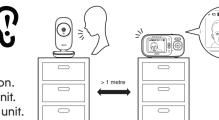
















(50 metres) indoors. The actual operating range may vary depending on the environmental conditions and other interferences such as walls, doors and other obstructions.

Press and hold TALK on the parent unit.

### Monitor the temperature

Your baby unit monitors the temperature of your baby's room with its built-in temperature

### Set temperature range

You can set the desired minimum and maximum room temperature alert ranges.

- 4. Press ▼ or ▲ to choose MIN or MAX, then press MENU select.
- Temperature alert tone
- 3. Press ▼ or ▲ to choose ♣ , then press MENU
- You can choose to display the temperature in Fahrenheit (°F) or Celsius (°C).

# **IECHNICAL SPECIFICATIONS**

Power requirements

ransmit frequency

Frequency confrol

CCD

Channels

Nominal effective range



# User's manual

# **CONGRATULATIONS**











The **POWER** LED light turns on.

# The screen and the **POWER** LED light turns on.

Adjust LCD brightness

Screen off timer

When the screen is turned off, you can still hear sound from the baby unit.

### Lullaby

2. Press ◀ or ▶ to choose ♬, then press MENU SELECT or ▲.

4. Press ▼ or ▲ to choose a lullaby or a soothing sound, or choose to stop playing.

Batteries should not be exposed to excessive heat such as bright sunshine or fire.

# personal computers, kitchen appliances and cordless Precautions for users of implanted cardiac pacemakers

- WTR's evaluation did not identify any risk to bystanders with This VTech product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the product is safe to be used based on scientific evidence available


# Adjust the sound sensitivity of the baby unit

- 3. Press ▼ or ▲ to choose the desired sensitivity level, then press MENU selection.

within 50 seconds, the screen will be off again.

3. Press ▼ or ▲ to choose ■N or ■H, then press MENU selection.

### BABY UNIT OVERVIEW

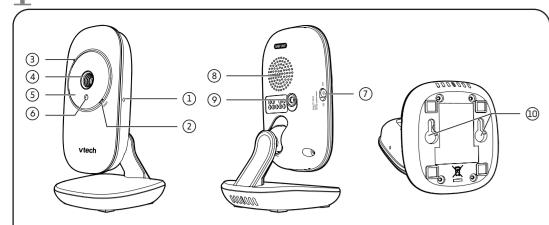

### 1 Pair hole

 Your baby units and parent unit provided are already paired.

### 2 POWER LED light


- On when the baby unit is turned on
- and is paired to the parent unit. • Flashes when the baby unit is not
- being viewed; or when the link to the parent unit is
- Microphone

- Infrared LEDs
- 6 Light sensor

### **ON/OFF** switch

- · Slide to turn on or off the baby unit.
- 8 Speaker
- 9 Power jack
- 10 Wall mount holes

### ■ PARENT UNIT OVERVIEW

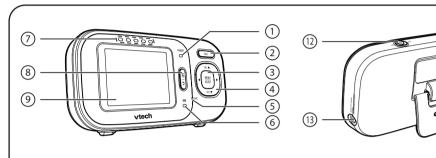


### 1 POWER LED light

- Green when the parent is powered
- Flashes green when no link to

Press and hold to talk to the selected

# PARENT UNIT OVERVIEW (CONT'D)

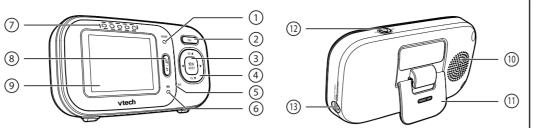

# Arrow keys and VOL▲ / VOL▼

- Press to increase the parent unit speaker volume.
- · While in a menu, press to scroll up, or to enter an item's sub-menu.
- While zooming, press and hold to move the zoomed image upward.

- Press to decrease the parent unit speaker volume.
- While in a submenu, press to scroll down.
- While zooming, press and hold to move the zoomed image downward.

VOL▼ / ▼

- · While in a menu, press to choose the next item on the left.
- While zooming, press and hold to move the zoomed image leftward.

- · While in a menu, press to choose the next item on the right.
- While zooming, <u>press and hold</u> to move the zoomed image rightward.

### MENU/SELECT

- · Press to enter or exit the menu.
- While in a sub-menu, press to choose an item, or save a setting.

### Microphone

### Battery indicator

- · Red when battery is charging.
- Flashes red when battery is low.

### Visual sound indicators

### 0 0 0 0

The visual sound indicators can show the sound level detected by the baby

### Sound level detected by the baby unit

- • • One to three green lights indicate a moderate sound level detected by the baby
- • Additional red lights indicate a higher sound level detected by the baby unit (e.g. baby crying loudly).

### **□**<sub>Ø</sub> LCD off/ **□** Back

- · Press to turn off LCD and keep the sound broadcast.
- · Press to return to the previous

### 9 LCD display


- 10 Speaker
- 11 Stand

### 12 **ON/OFF** switch

- · Slide to turn on or off the parent
- 13 Power jack

### PARENT UNIT ICONS

# 14 O B0 PO 0 215 m

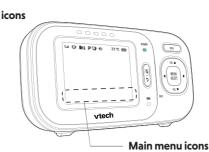

### Status icons

### **T\_\_\_\_** Connection status

- T. I or T. I displays when strong signal strength is detected between the baby unit and the parent unit.
- T. or T. or T displays when moderate or low signal strength is detected between the baby unit and the parent unit.
- As displays when the link between the baby unit and the parent unit is lost.

### ■1 or Current view status

· Displays the number of the baby unit that is being viewed.



### Displays when a lullaby is

playing

 Displays when the current image on the parent unit has zoomed in.

### Ð, **Night vision**

· Displays when the baby unit being viewed has activated the night vision feature.

### Mute alert

### · Displays when the parent unit is talking to the baby unit.

### Real-time temperature · Displays the real-time

temperature detected by the baby unit in Fahrenheit (°F) or Celsius (°C) (e.g. **57°F** or **14°C**).

### **Battery status**

- P > > - animates when the battery is charging.
- displays solid when the battery is fully charged.

### • I displays when the battery is low and needs charging.

 Displays the parent unit speaker volume level while adjusting.

### Main menu icons

**Brightness** 

the parent unit screen.

turn the screen off.

You can set a specific time to

With this feature, you can

choose to hear sounds from the

baby unit all the time, or to hear

sounds that exceed a certain

level. You can use the parent

unit to adjust the microphone

The higher the sensitivity level,

sensitivity of your baby unit.

the more sensitive the baby

unit is in detecting sounds for

transmitting to the parent unit.

LCD screen off timer

**VOX** sensitivity



### You can zoom in or out with 1x, 2x options while viewing image




The battery is empty and needs to be recharged.

range or is turned off.


The selected baby unit is out of

# • You can select, play, or stop a

The temperature detected by the baby unit is higher/lower than the desired temperature



The parent unit is searching for



Sound-activated screen · When the baby unit detects no sound, the parent unit screen stays off to save power. Once a sound is detected, the parent unit screen turns on automatically. It will then turn off again after 50 seconds of no sound detection.


### **Temperature**

 You can turn on the temperature alert tone so that the parent unit beeps whenever the room temperature detected by the baby unit falls outside of the desired temperature range. You can choose in Fahrenheit (°F) or Celsius (°C) as the temperature format displayed, or set the maximum/minimum temperature limit for alerts.

# You can change the brightness of

# alert range.

Warning icons and messages



# The parent unit is connected to

# DIM MODE

The dim mode is to help you save the parent unit power. Your parent unit display will dim automatically after 10 minutes of inactivity, in which there is neither key pressed nor alert received from the baby unit.

# ■ Notes

While the screen is dimmed, any keypress or alert message will trigger the screen to return to the preset brightness level. After 10 minutes of inactivity, it will dim again.

# NIGHT VISION

The baby unit has infrared LEDs that allow you to see your baby clearly at night or in a dark room. When the baby unit being viewed detects low light levels, the infrared LEDs are switched on automatically. The images from the baby unit are in black and white, and 🔾 appears on the

- It is normal if you see a short white glare on your parent unit screen as the baby unit is adapting to the
- When the infrared LEDs are on, the images are in black and white. This is normal.

Depending on the surroundings and other interfering factors, like lightings, objects, colors and backgrounds, the display resolution may vary. Adjust the baby unit's angle or place the baby unit at a higher level to prevent glare and blurry displa

# MOUNT THE BABY UNIT (OPTIONAL)

Your baby monitor comes ready for tabletop use. You can also choose to mount your baby monitor on the wall.

### GENERAL PRODUCT CARE

To keep this product working well and looking good, follow these guidelines

- · Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps) · DO NOT expose it to direct sunlight or moisture.
- · Avoid dropping the product or treating it roughly.
- · Clean with a soft cloth.
- · DO NOT immerse the parent unit and the baby unit in water and do not clean them under the tap. · DO NOT use cleaning spray or liquid cleaners
- Make sure the baby unit and parent unit are dry before you connect them to the mains again.

### STORAGE

When you are not going to use the baby monitor for some time, store the parent unit, the baby unit and the adaptors in a cool and dry place

# FREQUENTLY ASKED QUESTIONS

Below are the questions most frequently asked about the baby monitor

Why does the baby monitor not respond

normally?

the units?

- Try the following (in the order listed) for common cure:
- 1. Disconnect the power to the baby units and the parent unit.
- 2. Wait a few seconds before connecting power back to the baby units and the parent unit. 3. Turn on the baby units and the parent unit.
- 4. Wait for the parent unit to synchronize with the baby units. Allow up to one minute Why don't the power-on light of the baby unit and parent unit go on when I switch on
  - Perhaps the parent unit is not connected to the power. Insert the appliance plug into the parent unit and put the adaptor in a wall socket. Then, slide the **ON/OFF** to switch on the parent unit and to establish connection with the baby unit.
  - Perhaps the baby unit is not connected to the power. Insert the appliance plug into the baby unit and put the adaptor in a wall socket. Then, slide the **ON/OFF** switch to **ON** to switch on the baby unit and to establish connection with the parent unit.
- unit charge while connected to AC power? and white?

Why doesn't my parent

Why is my screen in black The screen is in black and white during night-time or in a dark room when the night vision feature is activated. This is normal Why do I get glare or During night-time or in a dark room, the surroundings and other interfering factors, like lightings, objects, colors and backgrounds may affect the image quality on your blurry display on my

Make sure the power is not controlled by a wall switch.

screen when viewing my baby at night? to prevent glare and blurry display Why does the baby The parent unit and baby units may be too close to each other Move the parent unit away from the baby units until the noise stops: OR monitor produce a

Why can't I establish a

connection? Why is the

connection lost every now

and then? Why are there

sound interruptions?

- Turn down the volume of your parent unit. high-pitched noise? Why does the parent unit 
  The baby units may be out of range. Move the parent unit closer to the baby units (but not less than 1 metre).
  - The parent unit may not have enough charge for the parent unit to perform normally. Charge the battery in the parent unit unit the battery icon becomes solid ......

parent unit screen. Adjust the baby unit's angle or place the baby unit at a higher level

- The temperature of your baby's room may be too high or too low. Why don't I hear a The parent unit speaker volume may be too low. Press **VOL** to increase the volume, or sound/Why can't I hear use the parent unit menu to change sound sensitivity level to the highest level (level 5). my baby cry?
  - Other electronic products may cause interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible.

The baby units may be out of range. Move the parent unit closer to the baby units (but

If you power on only one baby unit, your parent unit may display 🕻 and the POWER LED light flashes. Press VIEW to switch to the baby unit you have powered on.

# CUSTOMER SERVICE AND PRODUCT WARRANTY

## PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment,

- imaginative play and learning. . The product detailed above is covered by a one year warranty from the date of purchase,
- against any defects in materials or workmanshi 2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase,
- 3. VTech Electronics Europe plc will examine the product and if it is found to be defective
- due to faulty materials or workmanship, will replace the product at their discretion 1. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect
- electrical connections, then this warranty becomes void.
- 5. This warranty is personal to the original purchaser and is not transferable
- 5. Breakages to the LCD screen are not covered by the warranty. 7. Returns to VTech Electronics Europe plc should include a cheque or postal order for
- 3. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor) Please include details of the fault together with your name and address.
- P. To keep an online record of your warranty, please register your product online at www. tech Flectronics FLLPLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West
- THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT This warranty is valid for the UK and Eire only. For products purchased outside

the UK and Eire, please contact your local distributor or place of purchase.

Hallam, DE7 6HE

Please retain this booklet with your sales receipt as proof of the date of purchase.

Please call our Consumer Services Department on 03306 780149 (from UK) or +44 3306 780149 (outside UK) and a service representative will be happy to help you.

# ADULT SUPERVISION

- This baby monitor should be used as an aid and proper adult supervision is required.
- Do not place the baby unit inside the cot or playpen. · As for children's safety, touch or play with the baby monitor and all the accessories are not allowed. THIS IS

# DISPOSAL OF BATTERIES AND PRODUCT



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging

indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health. The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the

specified value of mercury (Hg), cadmium (Cd) or lead (Pn) set out in Battery Directive (2006/66/EC).

### The solid bar indicates that the product was placed on the market after 13th August, 2005. Help protect the environment by disposing of your product or batteries responsibly.

**DECLARATION OF CONFORMITY** 

VTech Telecommunications Ltd. hereby declares that

This product is intended for use within Europe and UK. This equipment complies with the essential requirements to EU's Radio Equipment Directive (2014/53/EU) and the UK's Radio Regulations 2017 on radio systems and telecommunication equipment.

this Video Monitor VM2251 is in compliance with the essential requirements and other relevant provisions of EU's Radio Equipment Directive (2014/53/EU) and UK's Radio Equipment Regulations 2017. The Declaration of Conformity for the VM2251 is available from



Manufacturer: VTech Telecommunications Ltd. 23/F., Tai Ping Industrial Centre, Block 1, 57 Ting kok Road, Tai Po, Hong Kong.

Importer: VTech Electronics Europe plc

Napier Court, Abingdon Science Park, Abingdon, Oxon, OX14 3YT, U.K.