IMPORTANT SAFETY INSTRUCTIONS

The applied nameplate is located at the bottom of the baby unit's base.

- When using your equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following: Follow all warnings and instructions marked on the
- Adult setup is required.
- 3. CAUTION: Do not install the baby unit at a height above

VM2251

Video Baby Monitor

vtech

User's manua

CONGRATULATIONS

on purchasing your new VTech product. Before using this product, please read Important safety

This manual has all the feature operations and troubleshooting necessary to install and operate

operation of this innovative and feature-rich VTech product.

What's in the box

All rights reserved. 07/21. VM2251_UK_CIB_V7

pecifications are subject to change without notice.

2021 VTech Telecommunications Ltd.

your new VTech product. Please review this manual thoroughly to ensure proper installation and

- This product is not a substitute for adult supervision of the infant. Supervising the infant is the responsibility of the parent or carer. This product could cease operating, and therefore you should not assume it will continue working properly for any given period of time. Further, this is not a medical device and should not be used as such. This product is intended to assist you in supervising your baby.
- This product is not intended for use as a medical
- 6. Do not use this product near water, for example, near to a bath, sink, swimming pool or shower a bain, swimming pool of shower.
 7. CAUTION: Use only the battery provided. There may be a risk of explosion if a wrong type of battery is used for the parent unit. The battery cannot be subjected to high or low extreme temperature and low air pressure at high affitude during use, storage or transportation. Disposal of battery into fire or a hot storage of transportation. Disposal of battery into the or a hot oven, or mechanically crushing or cutting or the battery can result in an explosion. Leaving the battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid of gas. Battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas. Dispose of used battery according to the instructions.
- Use only the adaptors included with this product ncorrect adaptor polarity or voltage can seriously lamage the product.



Ni-MH AAA800mAh 3.6V

- Model: Corun Ni-MH AAA800mAh 3.6V The power adaptors are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
- For pluggable equipment, the socket-outlet should be installed near the equipment and should be easily ccessible
- 11. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 12. Do not cut off the power adaptors to replace them with other plugs, as this causes a hazardous situation. Do not allow anything to rest on the power cords. Do not install this product where the cords may be walked on or
- crimped.
- This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company. 15. Do not overload wall outlets or use an extension cord. 16. Do not place this product on an unstable table, shelf, stand
- or other unstable surfaces. 17. This product should not be placed in any area where
- In the back or bottom of this product are provided. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat source

Power on or off the baby unit

USING THE BABY MONITOR

- Slide the ON/OFF switch to ON to turn on the baby unit.
- The **POWER** LED light turns on. Slide the ON/OFF switch to OFF to turn off the baby unit. The POWER LED light turns off.

Power on or off the parent unit

- Slide the ON/OFF switch to ON to turn on the parent unit.
- The screen and the **POWER** LED light turns on.
- Slide the **ON/OFF** switch to **OFF** to turn off the parent unit. The screen and the **POWER** LED light turns off.

Adjust parent unit speaker volume • Press VOL▲/VOL▼ on the parent unit to adjust the speaker volume.

Adjust LCD brightness

You can change the brightness of the parent unit screen from Level 1 to Level 5. The LCD brightness is preset to Level 3.

- 1. Press MENU when the parent unit is idle.
- 2. Press ◀ or ► to choose 🔆, then press ▲.
- 3. Press ∇ or \triangle to choose the desired level of brightness, then press $\frac{MENU}{SELECT}$ to confirm your selection.

Turn off parent unit screen

- Press 📭 to turn off the screen. You can still hear sound from the baby unit.
- Press again to turn on the screen.

Screen off timer

You can set the screen off time for the parent unit when there is no key press for a specific time interval

When the screen is turned off, you can still hear sound from the baby unit.

- 1. Press MENU when the parent unit is idle.
- 2. Press \triangleleft or \triangleright to choose \bigotimes , then press $\frac{MENU}{SELECT}$ or \blacktriangle to open the submenu.
- 3. Press ∇ or \blacktriangle to choose the desired time period to automatically turn off screen (IIII / 🔜 - 5 min. / 🔛 - 30 min. / 🕮 - 60 min.), then press MENU to confirm your selection.

Lullaby

The baby monitor has two lullabies and two soothing sounds for you to comfort your baby. You can play the lullabies or soothing sounds on the baby unit using the parent unit. 1. Press MENU when the parent unit is idle.

- 2. Press \triangleleft or \triangleright to choose \square , then press $\frac{MENU}{SELECT}$ or \blacktriangle .
- 3. Press \blacktriangle to choose $\bigotimes_{s \in \text{LECT}}$ then press $\underset{s \in \text{LECT}}{\overset{\text{MENU}}{\text{or}}}$ or \blacktriangleleft .
- 4. Press ∇ or \blacktriangle to choose a lullaby or a soothing sound, or choose $\frac{1}{2}$ to stop playing. 5. Press MENU to confirm your selection.

The selected lullaby plays for 30 minutes and stops automatically.
The lullaby playback on the baby unit will be paused when receiving talkback from the parent unit.

Am004 @ DO Vô :tuqtuO :rotqsba rewoq tinu tnensq Am004 @ DO V6 :tuqtuO :totqebe reword tinu ydab Power requirements Parent unit: 3.6V Ni-MH battery Actual operating range may vary according to environmental conditions at the time of use. əgnər əvitəəttə lenimoM 2.4" Colour LCD (QVGA 320x240 pixel) LCD Slannels 32 (Wm001) W01.0 :1911 and the transmission of the transmission (Wm001) with the transmission of transmission of the transmission of transmission Parent unit: 2405 - 2475 MHz Yoneupert timener zHM 2742 - 2045 :tinu yde8 Crystal controlled PLL synthesizer Frequency control

IECHNICAL SPECIFICATIONS

尜Tip

🖹 Note

- NOTE

CONNECT AND CHARGE THE BATTERY

Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the and wat of the short circuit.

To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the product other than specified access doors may expose

you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.

Periodically examine all components for damage

You should test the sound reception every time you turn on the units or move one of the components.

There is a very low risk of privacy loss when using certain electronic devices, such as baby monitors, cordless telephones, etc. To protect your privacy, make sure the product has never been used before purchase, reset the baby monitor periodically by powering off and then powering on the units, and power off the baby monitor if you will not use it for some time.

The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the product.

SAVE THESE INSTRUCTIONS

Use and store the product at a temperature between 0°C and 40°C.

and 40°C. Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating source.

Warning–Strangulation Hazard–Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3 ft (0.9 m) away). Do not

Other electronic products may cause interference

with your baby monitor. Try installing your baby monitor as far away from these electronic devices

Precautions for users of implanted cardiac pacemakers

as possible: wireless routers, radios, cellular telephones, intercoms, room monitors, televisions, personal computers, kitchen appliances and cordless

Cardiac pacemakers (applies only to digital cordless devices): Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and

implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians

Should keep wireless devices at least six inches from the

Should NOT place wireless devices directly over the pacemaker, such as in a breast pocket, when it is turned

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless devices.

This VTech product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the product is safe to be used based on scientific evidence available

Never place the baby unit(s) inside the baby's cot or playpen. Never cover the baby unit(s) or parent unit with anything such as a towel or a blanket.

Batteries should not be exposed to excessive heat such as bright sunshine or fire.

remove this tag.

elephones.

Pacemaker patients


Electromagnetic fields (EMF)

ΌN

kind on the product

- The rechargeable battery is pre-installed in your parent unit.
- Use only the power adaptors supplied with this product.
- Make sure the baby monitor is not connected to the switch controlled electric outlet.
- · Connect the power adaptors in a vertical or floor mount position only. The adaptors' prongs are not designed to hold the weight of baby monitor, so do not connect them to any ceiling, under-the-table, or cabinet outlets. Otherwise, the adaptors may not properly connect to the outlets · Make sure the parent unit, the baby unit and the power adaptor cords are out of reach of children

Connect the baby monitor

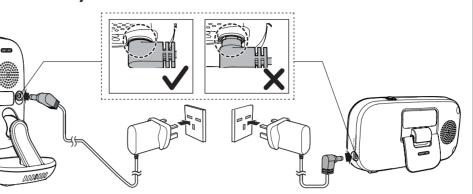

Charge the parent unit battery

When you have connected and turned on the parent unit, the battery will be charged automatically. The battery icon indicates the battery status (see the following table).

- Before using the baby monitor for the first time, charge the parent unit battery for 12 hours. When the parent unit battery is fully charged, the battery icon becomes solid 🎟
- It takes longer to charge the battery when the parent unit is turned on. To shorten the charging time, turn the parent unit off while charging.
- The standby time varies depending on the volume level you set and your actual use.

| BATTERY INDICATORS | BATTERY STATUS | Action |
|--|---|--|
| The screen displays Battery Iow at Parent Unit . The I or I light flashes. | The battery has very little charge and may be used for only a short time. | Charge without interruption (about 30 minutes). |
| The battery icon becomes solid III. | The battery is fully charged. | To keep the battery charged, connect it to AC power when not in use. |

2 Before use

🖹 Note

• This baby monitor should be used as an aid and proper adult supervision is required.

Test your baby monitor

You may test the baby monitor before initial use, and at regular times thereafter.

CAUTION

- For hearing protection, make sure the parent unit is more than 1 metre away from both baby units. If you hear any feedback, move the parent unit
- urther until the noise stops. You can also press **VOL** \blacksquare on the parent unit to reduce the noise.
- 1. Make sure your baby unit and parent unit
- are on. The parent unit displays images from the baby unit.
- Speak towards the microphone of the baby unit. You will hear the sound at the parent unit.
- 3. If you have two baby units, view the image from one of them by switching cameras via menu. Then, repeat step 2.

🖹 Note

When the parent unit displays \sum No link to Camera, and the POWER LED light flashes, move the parent unit closer to the baby units (observe the minimum distance of 1 metre). You can also check if the baby unit is connected to a live power socket and switched on.

Ŀ

尝Tip

Increase the speaker volume of the parent unit if you cannot hear the sounds transmitted from the baby units

Positioning the baby monitor

CAUTION

Keep the baby unit out of the reach of your baby. Never place or mount the baby unit inside the baby's cot or playpen NOTE 🗄

To avoid interference from other electronic devices, place your baby monitor far away from devices such as wireless routers, microwaves, cell phones and computers

В

- 1. Place the baby units more than 1 metre away from $\quad (1)$ your baby.
- 2. Adjust the angle of the baby unit camera to aim at your baby
- 3. Place the parent unit more than 1 metre away from the baby units.

CAUTION

- The default volume of your parent unit is level 3, and the maximum volume is level 5. If you experience feedback from your baby monitor while positioning:
- Make sure your baby units and parent unit are more than
- 1 metre apart, OF - Turn down the volume of your parent unit.

Operating range

The operating range of the baby monitor is up to 1000 feet (300 metres) outdoors or 160 feet (50 metres) indoors. The actual operating range may vary depending on the environmental conditions and other interferences such as walls, doors and other obstructions.

Adjust the sound sensitivity of the baby unit

You can choose to hear sounds from the baby unit all the time, or to hear sounds that exceed a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby unit. The higher the sensitivity level, the more sensitive the baby unit is in detecting sounds for transmitting to the parent unit. The VOX sensitivity level is preset to the highest level (Level 5).

| ITY | 때 Level 5 | 顺 Level 4 | Wi Level 3 | Wi Level 2 | ■ ₩ Level 1 |
|-----|--|--|---|---|--|
| ITY | Highest VOX sensitivity level | High VOX sensitivity level | Medium VOX sensitivity level | Low VOX sensitivity level | Lowest VOX sensitivity level |
| ION | The parent unit speaker is constantly on, and you will hear all sounds (including background noises) from your baby's room. | The parent unit speaker turns on for soft babbling and louder sounds from your baby. It remains quiet when your baby sleeps soundly. | The parent unit speaker turns on for loud babbling and louder sounds from your baby. It remains quiet when your baby makes soft sounds. | The parent unit speaker turns on for crying and louder sounds from your baby. It remains quiet when your baby makes soft sounds. | The parent unit speaker turns on for loud crying or screeching sounds from your baby. It remains quiet when your baby makes soft sounds. |

1. Press $\frac{MENU}{SELECT}$ when the parent unit is idle.

2. Press \triangleleft or \triangleright to choose $\forall M$, then press $\frac{MENU}{SELECT}$ or \blacktriangle to open the submenu.

3. Press ▼ or ▲ to choose the desired sensitivity level, then press MENU to confirm your selection.

• If the screen is off, and the setting of sound-activated screen is ON, then LCD screen will be turned on automatically when VOX sensitivity is triggered.

• If you want to use a sound machine or white noise machine for natural white noise while using this baby monitor to check on your baby, you can:

- Lower the volume of your sound machine or white noise machine; or - Lower the sensitivity level of your baby monitor to medium (level 3) or below. Default level is the highest level.

Turn on or off the sound activation

When sound activation is on, as long as no sound is detected within 50 seconds, the parent unit screen will turn off automatically to save power.

When your baby unit detects a sound, which exceeds the selected sensitivity level, the sound activation triggers the parent unit screen to turn on automatically. When no sound is detected within 50 seconds, the screen will be off again.

1. Press MENU when the parent unit is idle.

2. Press \triangleleft or \triangleright to choose \bigotimes , then press $\frac{MENU}{SELECT}$ or \blacktriangle to open the submenu.

3. Press ∇ or \blacktriangle to choose **DN** or **DH**, then press $\frac{MENU}{SELECT}$ to confirm your selection.

• If the sound sensitivity is set to the highest level, the parent unit screen may remain on continuously even though sound activation is on. This depends on whether the baby unit detects any sounds.

Zoom

You can zoom in while viewing images from the baby unit.

1. Press MENU when the parent unit is idle.

- 2. Press \blacktriangleleft or \blacktriangleright to choose O then press $\frac{MENU}{SELECT}$ or \blacktriangle to open the submenu.
- 3. Press ∇ or \triangle to choose $\mathbf{1}_{\mathbf{x}}$ or $\mathbf{2}_{\mathbf{x}}$, then press $\frac{MENU}{SELECT}$ to confirm your selection.

Talk

You can use the TALK function of the parent unit to comfort your baby.

Press and hold TALK on the parent unit.

2. Release the TALK key to stop the broadcast.

1. Speak towards the microphone on the parent unit. Your voice is broadcast to the baby unit.

Monitor the temperature

Your baby unit monitors the temperature of your baby's room with its built-in temperature sensor. If the detected temperature is out of the preset temperature range, the parent unit will display an alert message.

Set temperature range

You can set the desired minimum and maximum room temperature alert ranges.

- 1. Press MENU when the parent unit is idle
- Press ◀ or ► to choose ♣¹/₆, then press ▲
- 3. Press ∇ or \blacktriangle to choose \mathbb{P}^2 , then press $\frac{MENU}{SELECT}$
- 4. Press ▼ or ▲ to choose MIN or MAX , then press MENU select.
- 5. Press \forall or \blacktriangle to choose the desired minimum or maximum temperature, then press $\frac{MENU}{SELECT}$ to confirm your selection.

Temperature alert tone


You can turn on the temperature alert tone so that the parent unit will emit an alert tone if the detected temperature is out of range.

- 1. Press $\frac{MENU}{SELECT}$ when the parent unit is idle.
- 2. Press \triangleleft or \triangleright to choose \blacklozenge , then press \blacktriangle .
- 3. Press ∇ or \blacktriangle to choose \square , then press $\frac{MENU}{SELECT}$
- 4. Press ∇ or \blacktriangle to choose **DN** or **DH**, then press $\frac{MENU}{SELECT}$ to confirm your selection.


Temperature format

- You can choose to display the temperature in Fahrenheit (°F) or Celsius (°C).
- 1. Press MENU when the parent unit is idle.
- 2. Press \triangleleft or \triangleright to choose \clubsuit , then press \blacktriangle .
- 3. Press ∇ or \blacktriangle to choose \Re^{c}_{F} , then press $\frac{MENU}{SELECT}$.
- 4. Press ∇ or \blacktriangle to choose **"F** or **"C**, then press $\frac{MENU}{SELECT}$ to confirm your selection.

BABY UNIT OVERVIEW

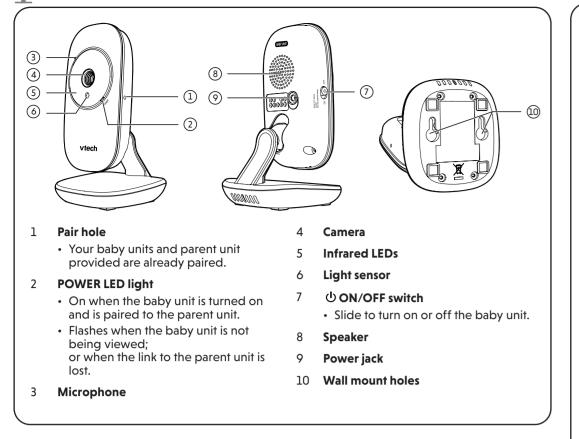

PARENT UNIT OVERVIEW

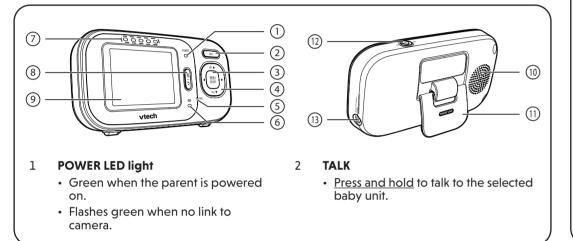

The dim mode helps save parent unit power. Your parent unit display will dim automatically after 10 minutes of inactivity, when no keys are pressed or alerts are received from the baby unit.

While the screen is dimmed, any keypress or alert message will trigger the screen to return to the preset brightness level. After 10 minutes of inactivity, it will dim again.

NIGHT VISION

The baby unit has infrared LEDs that allow you to see your baby clearly at night or in a dark room. When the baby unit being viewed detects low light levels, the infrared LEDs are switched on automatically. The images from the baby unit are in black and white, and 🕄 appears on the screen

NOTES

It is normal if you see a short white glare on your parent unit screen as the baby unit adapts to the dark

When the infrared LEDs are on, the images are in black and white. This is normal. 淙 ΤιΡ

Depending on the surroundings and other interfering factors, like lightings, objects, colours and backgrounds, the display resolution may vary. Adjust the baby unit angle or place the baby unit at a higher level to prevent glare and a blurry display

MOUNT THE BABY UNIT (OPTIONAL)

Your baby monitor comes ready for tabletop use. You can also choose to mount your baby monitor on the wall.

Seneral product care

To keep this product working well and looking good, follow these guidelines:

 Avoid placing it near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).

- DO NOT expose it to direct sunlight or moisture.
- Avoid dropping the product or treating it roughly.
- Clean with a soft damp cloth.
- DO NOT immerse the parent unit and the baby unit in water and do not clean them under running water.
- DO NOT use cleaning spray or liquid cleaners.

Make sure the baby unit and parent unit are dry before you connect them to the mains again.

PARENT UNIT OVERVIEW (CONT'D)



Arrow keys and VOL▲ / VOL▼

- VOLA / A Press to increase the parent unit speaker volume.
- While in a menu, press to scroll up, or to enter an item's sub-menu.
- While zooming, press and hold to move the zoomed image upward. VOLV / V
- Press to decrease the parent unit speaker volume.
- While in a submenu, press to scroll down.
- While zooming, press and hold to move the zoomed image downward.

- While in a menu, press to choose the next item on the left.
- While zooming, press and hold to move the zoomed image leftward.
- While in a menu, press to choose the next item on the right.
- While zooming, press and hold to move the zoomed image rightward.

MENU/SELECT · Press to enter or exit the menu.

- While in a sub-menu, press to choose
- an item, or save a setting.

(12)

Microphone

- **Battery indicator** 6 • Red when battery is charging.
 - Flashes red when battery is low.

Visual sound indicators 0 0 0 0 0

The visual sound indicators can show the sound level detected by the baby unit.

Sound level detected by the baby unit

- • • • • • One to three green lights indicate a moderate sound level detected by the baby unit
- • • • Additional red lights indicate a higher sound level detected by the baby unit (e.g. baby crying loudly).
- 🖳 LCD off/ ⊅ Back
- Press to turn off LCD and keep the sound broadcast.
- Press to return to the previous
- screen

9 LCD display

- 10 Speaker
- 11 Stand
- 12 **ON/OFF switch**
- · Slide to turn on or off the parent unit
- 13 Power jack

STORAGE



Status

Tail

€1 or

₹2 or

€ I or

44

5

Ð

:)

When you are not going to use the baby monitor for some time, store the parent unit, the baby unit and the adaptors in a cool and dry place

^Q_∞ Frequently asked questions

| Why does the baby monitor not respond normally? | Try the following (in the order listed) for common cure: Disconnect the power to the baby units and the parent unit. Wait a few seconds before connecting power back to the baby units and the parent unit. Turn on the baby units and the parent unit. Wait for the parent unit to synchronize with the baby units. Allow up to one minute for this to take place. | | | |
|---|---|--|--|--|
| Why doesn't the baby unit and parent unit power-on light illuminate | Perhaps the parent unit is not connected to the power. Insert the appliance plug into the parent unit and insert the adaptor in a wall socket. Then, slide the \mathcal{O} ON/OFF to switch on the parent unit and to establish connection with the baby unit. | | | |
| when the units are switched on? | Perhaps the baby unit is not connected to the power. Insert the appliance plug into the baby unit and insert the adaptor in a wall socket. Then, slide the ON/OFF switch to ON to switch on the baby unit and to establish connection with the parent unit. | | | |
| Why doesn't my parent unit charge while connected to AC power? | Make sure the power is not controlled by an electronic wall switch. | | | |
| Why is my screen in black and white? | The screen is in black and white during night-time or in a dark room when the night vision feature is activated. This is normal. | | | |
| Why do I get glare or blurry display on my screen when viewing my baby at night? | During night-time or in a dark room, the surroundings and other interfering factors, like lighting, objects, colours and backgrounds may affect the image quality on your parent unit screen. Adjust the baby unit angle or place the baby unit at a higher level to prevent glare and a blurry display. | | | |
| Why does the baby monitor produce a feedback? | The parent unit and baby units may be too close to each other. Move the parent unit away from the baby units until the noise stops; OR Turn down the volume of your parent unit. | | | |
| Why does the parent unit beep? | The baby units may be out of range. Move the parent unit closer to the baby units (bu not less than 1 metre). | | | |
| | The parent unit may not have enough charge for the parent unit to perform normally. Charge the battery in the parent unit unit the battery icon becomes solid III . | | | |
| | The temperature of your baby's room may be too high or too low. | | | |
| Why don't I hear a sound/Why can't I hear my baby cry? | The parent unit speaker volume may be too low. Press VOLA to increase the volume, use the parent unit menu to change sound sensitivity level to the highest level (level 5) | | | |
| Why can't I establish a connection? Why is the | The baby units may be out of range. Move the parent unit closer to the baby units (but not less than 1 metre). | | | |
| connection lost every now and then? Why are there sound interruptions? | Other electronic products may cause interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible. | | | |
| | If you power on only one baby unit, your parent unit may display b and the POWER LED light flashes. Press VIEW to switch to the baby unit you have powered on. | | | |



IMPORTANT



Customer Service

PARENT UNIT ICONS

| | | Main menu icons | | Warning icons and messages | |
|---|---|-----------------|--|----------------------------|--|
| Status i | | Ð | Zoom You can zoom in or out with 1x, 2x options while viewing image. | 6 | The selected baby unit is out of range or is turned off. |
| | | 5 | LullabyYou can select, play, or stop a lullaby. | Ō | The battery is empty and needs to be recharged. |
| viech | Main menu icons | × | Brightness You can change the brightness of the parent unit screen. | ∦A or ∦A | The temperature detected by the baby unit is higher/lower than the desired temperature alert range. |
| sicons | | × | LCD screen off timer You can set a specific time to turn the screen off. | To | The parent unit is searching for baby units. |
| Connection status T.II or T.I displays when strong signal strength is detected between the baby unit and the parent unit. T. or T. or T displays when moderate or low signal strength is detected between the baby unit and the parent unit. To displays when the link between the baby unit and the parent unit and the parent unit. To displays when the link between the baby unit and the parent unit. Displays the number of the baby unit that is being viewed. Lullaby Displays when a lullaby is playing. Displays when the current image on the parent unit has zoomed in. Night vision Displays when the baby unit being viewed has activated the night vision feature. | Mute alert Displays when the parent unit is talking to the baby unit. For Cal-time temperature Displays the real-time temperature detected by the baby unit in Fahrenheit (°F) or Celsius (°C) (e.g. 57 °F or 14 °C). Mattery status Piper Piper P | ¢¶ | VOX sensitivity With this feature, you can choose to hear sounds from the baby unit all the time, or to hear sounds that exceed a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby unit. The higher the sensitivity level, the more sensitive the baby unit is in detecting sounds for transmitting to the parent unit. Sound-activated screen When the baby unit detects no sound, the parent unit screen stays off to save power. Once a sound is detected, the parent unit screen turns on automatically. It will then turn off again after 50 seconds of no sound detection. Temperature You can turn on the temperature alert tone so that the parent unit beeps whenever the room temperature detected by the baby unit falls outside of the desired temperature range. You can choose in Fahrenheit (°F) or Celsius (°C) as the temperature format displayed, or set the maximum/minimum temperature limit for alerts. | 3- | The parent unit is connected to AC power. |

CUSTOMER SERVICE AND PRODUCT WARRANTY



Visit www.vtech.co.uk/clubvtech/login to register your VTech product By joining the VTech Club you can also enter competitions

d out about news and events, seek expert advice for parent and let your kids play fun learning games and activities.



. The product detailed above is covered by a one year warranty from the date of purchas

against any defects in materials or workmanship The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe Plc (see address below), with proof of purchase

without proof of purchase no replacement will be provided. 3. VTech Electronics Europe Plc will examine the product and if it is found to be defective

due to faulty materials or workmanship, will replace the product at their discret 4. If the product covered by this warranty is damaged due to misuse, modification or unauthorized repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.

5. This warranty is personal to the original purchaser and is not transferable

6 Breakages to the LCD screen are not covered by the warranty

7. Products returned to VTech Electronics Europe Plc, should be sent to the address show below and packed carefully to avoid damage in transit. Please do not include batteries or adaptors. Please include details of the fault together with your name and address, contact phone number and/or email address

8. To keep an online record of your warranty, please register your product online at

VTech Electronics Europe Plc, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Ireland only. For products purchased outside the UK and Ireland, please contact your local distributor or place of purchase.

Please retain this booklet with your sales receipt as proof of the date of purchase.

Please call our Consumer Services Department on 03306 780149 (from UK) or +44 3306 780149 (outside UK) and a service representative will be happy to help you.

ADULT SUPERVISION

- This baby monitor should be for use by adults only.
- Do not place the baby unit inside the cot or playpen.
- To ensure your children's safety, do not allow them to touch or play with the baby monitor and its accessories. THIS IS NOT A TOY.

DISPOSAL OF BATTERIES AND PRODUCT



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pn) set out in Battery Directive (2006/66/EC). The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

DECLARATION OF CONFORMITY

This product is intended for use within Europe and UK.

This equipment complies with the essential requirements to EU's Radio Equipment Directive (2014/53/EU) and the UK's Radio Regulations 2017 on radio systems and telecommunication equipment.

VTech Telecommunications Ltd. hereby declares that

this Video Monitor VM2251 is in compliance with the essential requirements and other relevant provisions of EU's Radio Equipment Directive (2014/53/EU) and UK's Radio Equipment Regulations 2017.

The Declaration of Conformity for the VM2251 is available from www.vtechbabycare.com.



Manufacturer: VTech Telecommunications Ltd. 23/F., Tai Ping Industrial Centre, Block 1, 57 Ting kok Road, Tai Po, Hong Kong.

Importer: VTech Electronics Europe Plc Napier Court, Abingdon Science Park, Abingdon, Oxon, OX14 3YT, U.K.